

## Quick Color Match Supported Papers

Updated February 2018

Epson		SC-P800	SC-P600	SC-P400	Stylus Photo R3000	Stylus Photo R2000
<b>Worldwide</b>	<b>USA</b>					
Velvet Fine Art Paper	Velvet Fine Art Paper	Yes	Yes	Yes	Yes	Yes
Ultra Smooth Fine Art Paper	Ultra Smooth Fine Art Paper	Yes	Yes	Yes	Yes	Yes
Premium Glossy	Premium Photo Paper Glossy	Yes	Yes	Yes	Yes	Yes
Premium Semigloss	Premium Photo Paper Semigloss	Yes	Yes	Yes	Yes	Yes
Premium Luster	Ultra Premium Photo Paper Luster	Yes	Yes	Yes	Yes	Yes
Archival Matte	Ultra Premium Presentation Matte	Yes	Yes	Yes	Yes	Yes
Matte	Premium Presentation Paper Matte	No	No	Yes	Yes	Yes
<b>ILFORD (worldwide)</b>						
ILFORD Gold Fibre Silk		Yes	Yes	Yes	Yes	Yes
ILFORD Gold Fibre Gloss		Yes	Yes	Yes	Yes	No
ILFORD Smooth Cotton Rag		Yes	Yes	Yes	Yes	No
ILFORD Textured Cotton Rag		Yes	Yes	Yes	Yes	No
ILFORD Smooth Pearl		Yes	Yes	Yes	Yes	No
ILFORD Smooth Gloss		Yes	Yes	Yes	Yes	No
<b>Pictorico (worldwide)</b>						
Pictorico Pro Hi-Gloss White Film		Yes	Yes	Yes	Yes	Yes
Pictorico Pro Hi-Glass Photo Paper		Yes	Yes	Yes	Yes	Yes
Pictorico Pro Semi-Glass Paper		Yes	Yes	Yes	Yes	Yes
Pictorico Pro Soft-Gloss Paper		Yes	Yes	Yes	Yes	Yes
Pictorico Pro Cotton Paper		Yes	Yes	Yes	Yes	Yes
Pictorico Pro Design Paper Plus		No	Yes	No	Yes	Yes
GEKKO Blue		Yes	Yes	Yes	Yes	Yes

Canon (worldwide)	PIXMA PRO-1	PIXMA PRO-10	PIXMA PRO-10S	PIXMA PRO-100	PIXMA PRO-100S	imagePROGRAF PRO-1000 (Asia: PRO-500)
Photo Paper Platinum	Yes	Yes	Yes	Yes	Yes	Yes
Photo Paper Plus Glossy	Yes	Yes	Yes	Yes <sup>1,2</sup>	Yes <sup>1,2</sup>	Yes <sup>1,3</sup>
Photo Paper Pro Luster	Yes	Yes	Yes	Yes	Yes	Yes
Photo Paper Pro Premium Matte	Yes	Yes	Yes	Yes	Yes	Yes <sup>4</sup>
Photo Paper Plus Semi-Gloss	Yes	Yes	Yes	Yes	Yes	Yes
Matte Photo Paper	Yes	Yes	Yes	Yes	Yes	Yes
<b>ILFORD (worldwide)</b>						
ILFORD Gold Fibre Silk	Yes	Yes	Yes	Yes	Yes	Yes
ILFORD Gold Fibre Gloss	Yes	Yes	Yes	Yes	Yes	Yes
ILFORD Smooth Cotton Rag	Yes	Yes	Yes	Yes	Yes	Yes
ILFORD Textured Cotton Rag	Yes	Yes	Yes	Yes	Yes	Yes
ILFORD Smooth Pearl	Yes	Yes	Yes	Yes	Yes	Yes
ILFORD Smooth Gloss	Yes	Yes	Yes	Yes	Yes	Yes
<b>Pictorico (worldwide)</b>						
Pictorico Pro Hi-Gloss White Film	Yes	Yes	Yes	Yes	Yes	Yes
Pictorico Pro Hi-Glass Photo Paper	Yes	Yes	Yes	Yes	Yes	Yes
Pictorico Pro Semi-Glass Paper	Yes	Yes	Yes	Yes	Yes	Yes
Pictorico Pro Soft-Gloss Paper	Yes	Yes	Yes	Yes	Yes	Yes
Pictorico Pro Cotton Paper	Yes	Yes	Yes	Yes	Yes	Yes
Pictorico Pro Design Paper Plus	No	Yes	Yes	Yes	Yes	Yes
GEKKO Blue	Yes	Yes	Yes	Yes	Yes	Yes

<sup>1</sup> When using Photo Paper Plus Glossy with Canon PRO-100, PRO-100S, or PRO-1000, refer to the instructions on the packaging to match the paper type (Photo Paper Plus Glossy or Photo Paper Plus Glossy A) with your selection in Quick Color Match.

<sup>2</sup> Printer driver ver. 2.86 (Windows) or 16.0.5.0 (Mac) or later is required.

<sup>3</sup> Paper must be added via Media Configuration Tool.

<sup>4</sup> When using Photo Paper Pro Premium Matte with imagePROGRAF PRO-1000 (PRO-500), confirm the details written on the paper packaging.

For Photo Paper Pro Premium Matte (A), select Premium Matte A on the Quick Color Match screen.

For other paper types, select Premium Matte on the Quick Color Match screen.